

SNIRT STOPPER™

*Patent Pending

Installation Instructions for the Snirt Stopper


Snirt Stopper will give you years of all-weather performance. The Snirt Stopper will provide added insulation, and keep dirt and critters out of your garage.

Contents:

1 Snirt Stopper
1 Set of Screws

You will need:

Cordless drill with #02 Phillips head
1/8 Drill Bit

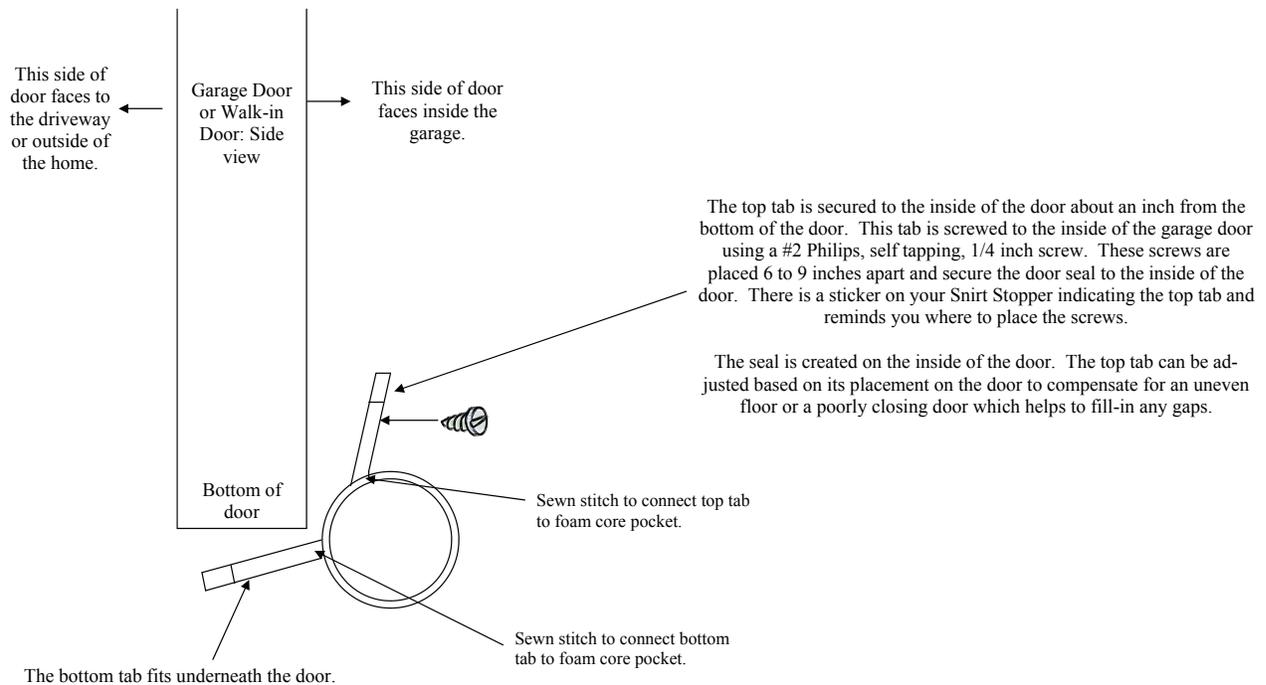

Choking Hazard: This package contains small parts which may be a choking hazard to children under 3. Keep small parts away from children.

Sharp objects: This package contains screws, which may have sharp edges. Handle with care.

1. Begin installation by measuring your door to make sure you have purchased the correct size. Custom sizes are available at www.snirtstopper.com.
2. Open your garage door to a comfortable working height. Most electric garage door openers can stop the door halfway between fully open and fully closed by pushing the open/close button twice at the desired height. Make sure to brace or block the door so that it stays at a comfortable work position. It may be beneficial to have a helper at this point.

SNIRT STOPPER™

*Patent Pending

3. Lay out the Snirt Stopper flat along the floor with the Snirt Stopper logo on the right and the top tab facing up.
4. Begin at one end of the door and hold the Snirt Stopper so that the edge of the Snirt Stopper is flush with the edge of the door. Note: Make sure you are attaching the Snirt Stopper to the inside of the door. The foam needs to remain inside the garage, not outside or underneath the door.



5. Insert the first screw about 1 inch from the edge of the door (or next to the edge of the roller bracket). Some places on the door (usually the ends) may need predrilling with an 1/8 inch drill bit since there is extra metal in some areas. Pull the Snirt Stopper tight and level to remove wrinkles in Snirt Stopper caused by packaging, place the next screw 6 to 9 inches from the initial screw. Repeat process until you reach the edge of the door and install your final screw about 1 inch from the edge of your door (or just to the edge of the roller bracket).
6. Lower the door and inspect the fit of the seal. The seal should touch the floor across its entire length at about the same time. You may also want to check the possible overlap of your Snirt Stopper with any electronic eye sensors for your garage door. Refer to your garage door openers owner manual should photo eyes need adjustments.
7. The Snirt Stopper is flexible enough to allow you to adjust its placement on the bottom of the door to help with any inconsistencies you may have in the fit between the floor and door. If your door does not rest flush on the floor, fully close your door and look for gaps. Readjust the seal, at any points where gaps are visible by backing out the screw(s) and slightly moving the Snirt Stopper lower or higher, as needed and re-inserting the screws. Remember the longer "tab" is meant to go underneath the door.

Congratulations, you have installed your new seal!

LIMITED WARRANTY:

High Plains Industries will repair or replace a defective Snirt Stopper for one (1) year after purchase. This warranty applies only to the original purchases of the Warranted Products from a retailer, mail order operation, or on-line retail store; this warranty will not extend to any person that acquires a Warranted Product on a used basis.

Visit www.snirtstopper.com for additional warranty information.

Thank you for purchasing the Snirt Stopper! We believe you will enjoy many years of all-weather protection.